

## NPSW480 Series – Single, 2 or 3 Phases / DC input switching power supply with integrated PFC DC OK OVERLOAD 23...28V ⚠ +++ OUTPUT 24VDC/204 Main Features: 2 Single, 2 or 3 Phases input AC 187...550Vac Wide DC input range 250...725Vdc DC OK 24V/1A ٠ • Active PFC for optimal efficiency • SWITZERLAND www.nextys.com High efficiency 92% and compact size • NPSW480-24 Overload 140% ٠ Usable for broad range of industrial, telecom and renewable energy applications •

INDEX	
	Page
Installation Requirements	2
Declaration of Conformity	2
User Instructions	3
Connections	4
Dimensions	4
Distances	4
Mounting	4
Dismounting	5
Input Connections	5
Environment	5
Accessory Device	5



READ THIS CAREFULLY BEFORE INSTALLATION!	LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE!	A LIRE ATTENTIVEMENT AVANT L'INSTALLATION!	
Before operating, read this document thoroughly and retain	Prima dell'installazione, leggere attentamente questo	Lisez ces instructions avant l'installation, conservez ce	
it for future reference.	documento istruzioni e conservarle per future consultazioni.	manuel pour référence future.	
Non-respect of these instructions may reduce	L'inosservanza delle presenti istruzioni può compromettere le	Défaut de se conformer à ces instructions peut affecter les	
performances and safety of the devices and cause danger	caratteristiche e la sicurezza dell'apparecchio e causare	caractéristiques et la sécurité du dispositif de danger et de	
for people and property.	pericolo per le persone e le cose.	causer aux personnes ou aux biens.	
The products must be installed, operated, serviced and	Il prodotto deve essere installato, utilizzato e riparato da	Les produits doivent être installés, exploité et entretenus par	
		personnel qualifié et en conformité avec les règlements.	
		N'ouvrez pas le produit, il ne contient aucune pièce réparable,	
		le déclenchement du fusible interne (le cas échéant) est	
components, the tripping of the internal fuse (if included) is		causé par un défaut interne. Ne pas essayer de réparer ou	
		modifier le produit ; si des défaillances se produisent pendant	
		le fonctionnement ou les dysfonctionnements, le retourner au	
should occur during operation, send unit to the factory for		fabricant pour inspection. Nextys SA n'assume aucune	
inspection. No responsibility is assumed by Nextys SA for		responsabilité des conséquences éventuelles découlant de	
any consequences deriving from the use of this material.		l'utilisation des produits.	
CAUTION	ATTENZIONE	AVVERTISSEMENT	
RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL	RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA,	RISQUE DE BRULURES, EXPLOSION, INCENDIE,	
SHOCK, PERSONAL INJURY.	LESIONI GRAVI.	ELECTROCUTION, DOMMAGE AUX PERSONNES.	
Never carry out work on live parts! Danger of fatal injury!	Non effettuare mai operazioni sulle parti sotto tensione! Pericolo	Ne jamais effectuer des opérations sur les parties sous	
The product's enclosure may be hot, allow time for cooling		tension! Danger de mort! Le récipient peut produire des	
product before touching it. Do not allow liquids or foreign	raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi	brulures, le laisser refroidir avant de toucher l'appareil. Ne	
		faites pas pénétrer des liquides ou des corps étrangers dans	
		l'appareil. Pour éviter des étincelles, ne pas connecter ou	
		déconnecter l'équipement jusqu'à ce que vous avez supprimé	
internal capacitors discharge (minimum 1 minute).		la tension d'entrée et avant qu'elle n'ait lieu de décharge des	
	1 minuto).	condensateurs internes (minimum 1 minute).	

## DECLARATION OF CONFORMITY



Date: 25.02.2016

Place: Quartino, Switzerland

- EN61000-3-2:2014

The product manager

M *Cimica* Marius Ciorica

(Limits for harmonics current emissions)




## USER INSTRUCTIONS

1) Description: DIN rail mountable primary switched-mode power supply with 187...550Vac (250...725Vdc) input, suitable for Single, 2 or 3 Phases main line and DC line. 2) Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3). The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping. The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8) 3) Connections: the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute) In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures of: 60°C for ambient up to 45°C 75°C for ambient up to 60°C 90°C for ambient up to 70°C Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5) 4) Input protection: the device input is provided with varistors against overvoltage. Input isn't provided with internal fuses, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6). For operation on a single-phase, 2 or 3 phases system, a protection fuse on each phases must be provided. Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations. 5) AC input connection: the device can be connected to single-phase AC lines with Uin 230Vac and to two or three phases conductors of 3-phase lines with Un 200...500Vac (see Fig.7). Please connect first the PE. 6) DC input connection: connect L/L1 terminal to (+) positive pole, N/L2 terminal to (-) negative pole, L3 do not connected, and I terminal to GND. Rated voltage 250...725Vdc. The device is also suitable for photovoltaic or wind turbine applications (see Fig.7). For UL applications use up to 500Vdc 7) Output connection: The device is suitable for SELV and PELV circuitry. Pay attention NPSW480-72 is not SELV. Uout can be adjusted with a potentiometer to a wide range (see Fig.1) Check Uout before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power. 8) Parallel connection and redundancy: power supplies can be connected in parallel to increase power. Uout must be set uniformly (±100mV) on each power supply and the wiring must be symmetrical to ensure an equal current distribution. For redundant connection, use an external isolating device must be used (see accessory device). 9) Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). OL and SC: are controlled by a hiccup mode auto-reset protection with the following behaviour. OL behaviour: Max. OL = In x 1.5 with constant output voltage for max 5s. If the current is  $\geq$  In x 1.5 the unit enters the OL protection and starts an ON/OFF cycle (hiccup mode). SC behaviour: the device supplies the indicated short circuit peak current for 250ms if the output current exceeds In x 1.5 the device enters into a controlled ON/OFF cycles (hiccup mode). The output voltage drops to a voltage value depending on the impedance of the failed load circuit. Output OV circuit protection: the output is protected against potential OV due to internal malfunction or coming from the load for Uout ≥ Unom x 1.2 – 1.3, depending on the model OT protection: turns off the device if the internal temperature exceeds a safe limit. The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8) 10) Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device).

NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.

11) Operation with Battery: when a battery is connected in parallel to the Output for backup purposes (see accessory device).



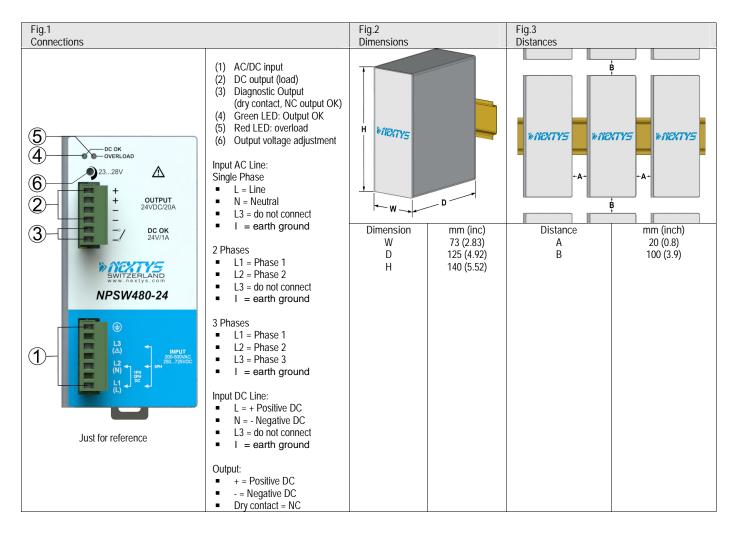


### Fig.4 Mounting / Dismounting Instructions

For DIN rail fastening according to IEC 60715 TH35-7.5(-15)

Mounting as shown in figure, with input terminals on lower side, with suitable cooling and maintaining a proper distance between adjacent devices as specified in the I.S. manual of each family.


# Mounting:

- 1. Tilt the unit slightly backwards.
- 2. Fit the unit over the top edge of the rail.
- 3. Slide it downward until it hits the stop.
- 4. Press against the bottom for locking.

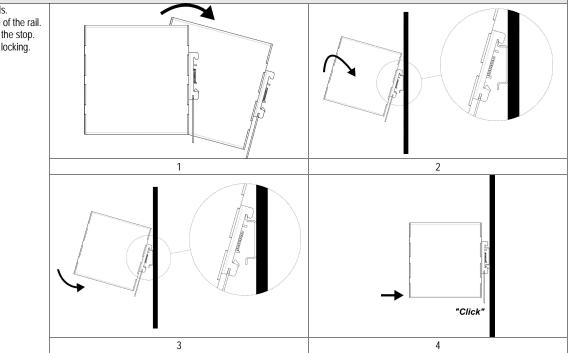

#### NPSW480 Series Instruction Manual



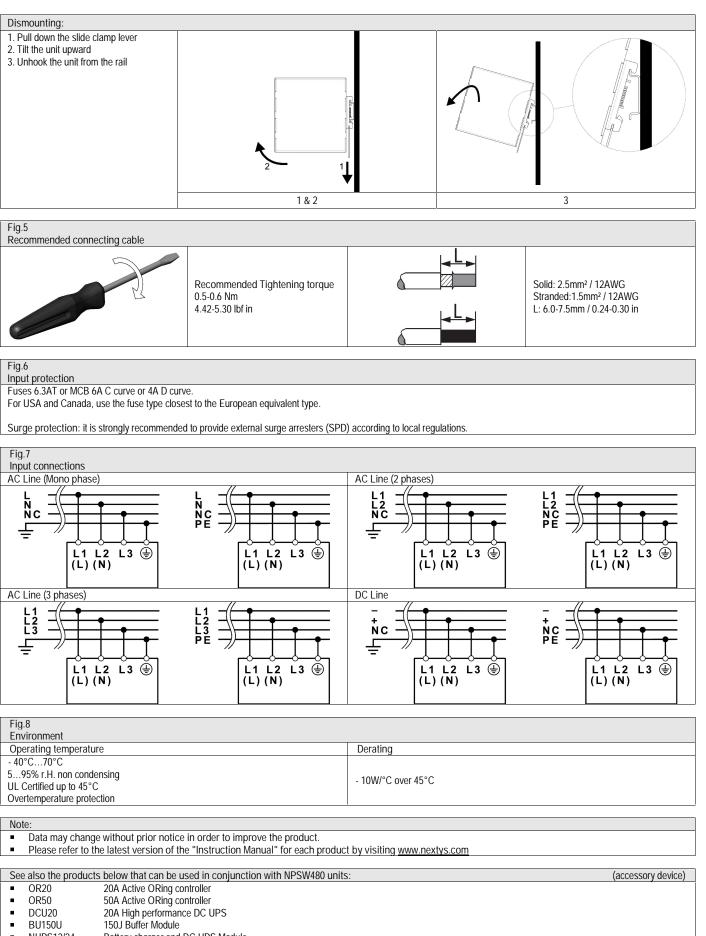

- Battery charger and DC UPS Module NUPS12/24 2000W Motor brake controller
- MBC2K NBP30
- Sealed Lead acid Battery pack